BREEZE PRO

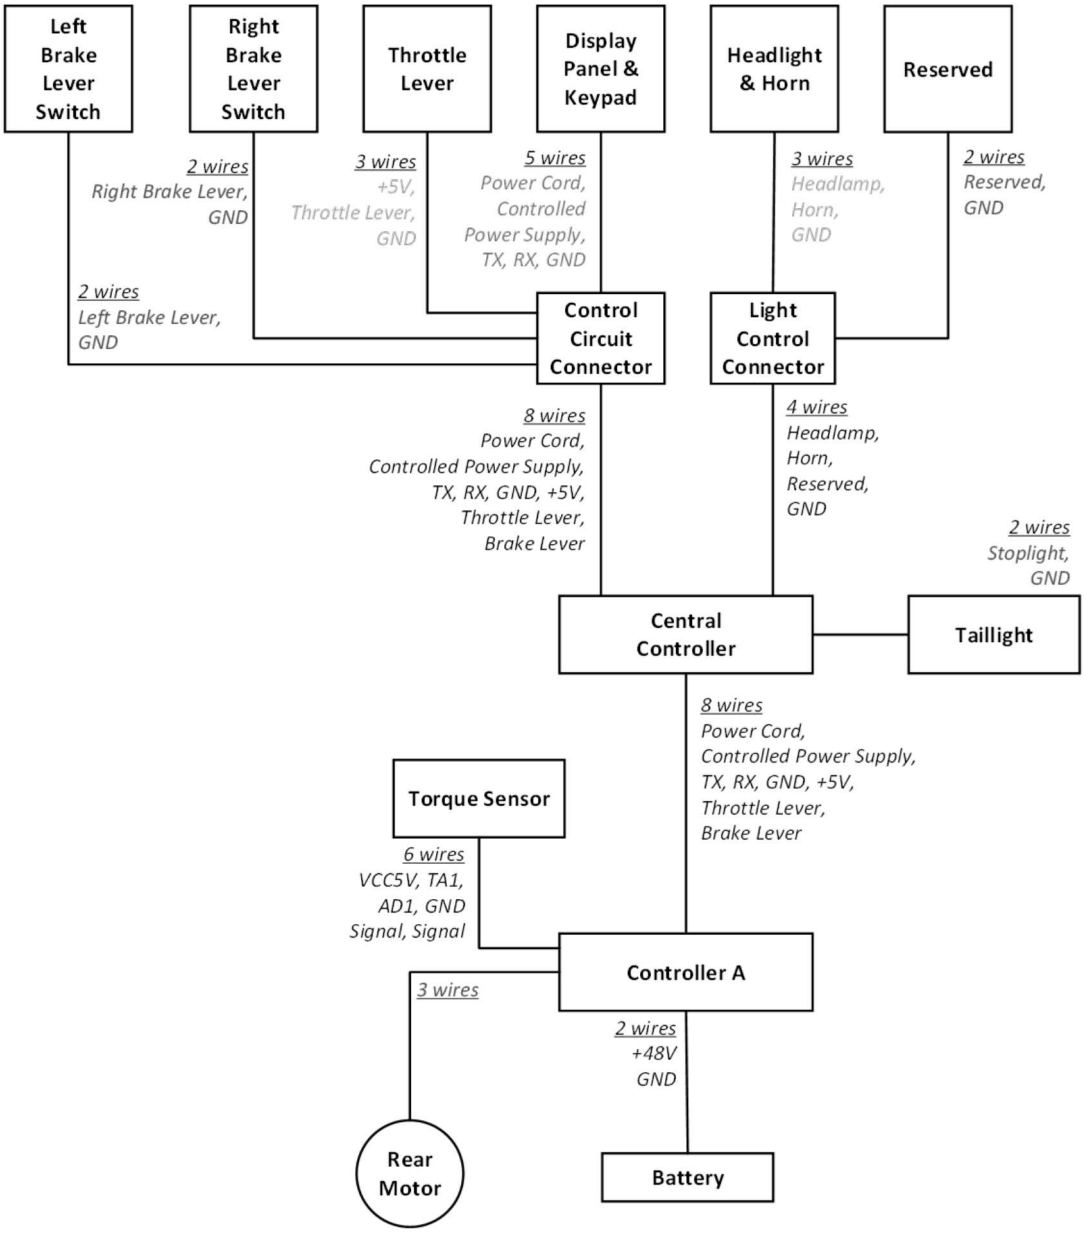
Left Brake Lever Switch
Right Brake Lever Switch
Throttle Lever
Display Panel & Keypad
Headlight & Horn
Reserved
2 wires
Right Brake Lever, GND
3 wires
+5V, Throttle Lever, GND
5 wires
Power Cord, Controlled Power Supply, TX, RX, GND
3 wires
Headlamp, Horn, GND
2 wires
Reserved, GND
2 wires
Left Brake Lever, GND
Control Circuit Connector
Light Control Connector
8 wires
Power Cord, Controlled Power Supply, TX, RX, GND, +5V, Throttle Lever, Brake Lever
4 wires
Headlamp, Horn, Reserved, GND
2 wires
Stoplight, GND
Central Controller
Taillight
8 wires
Power Cord, Controlled Power Supply, TX, RX, GND, +5V, Throttle Lever, Brake Lever
Torque Sensor
6 wires
VCC5V, TA1, AD1, GND Signal, Signal
Controller A
3 wires
2 wires
+48V GND
Rear Motor
Battery